

The 
Andersons®


DropZone™

Spreader




Spreader Parts

MAIN PARTS (Part images not to scale)

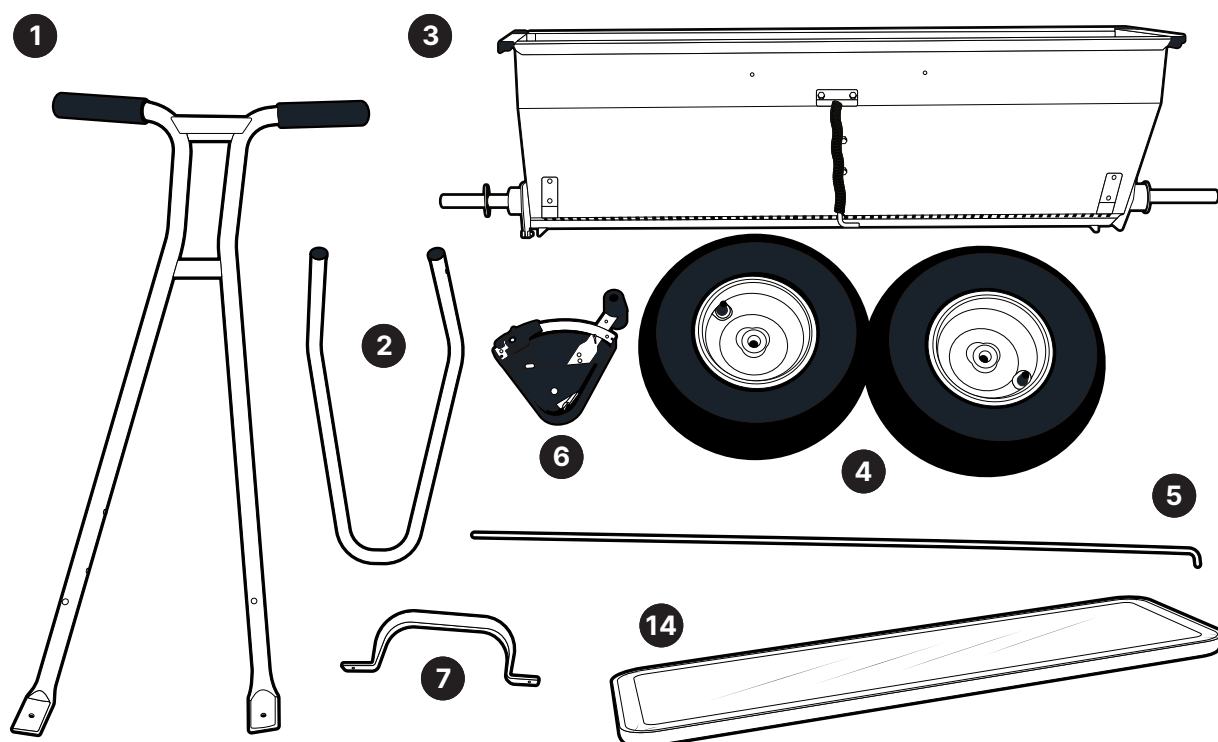


FASTENERS PACK CONTENTS

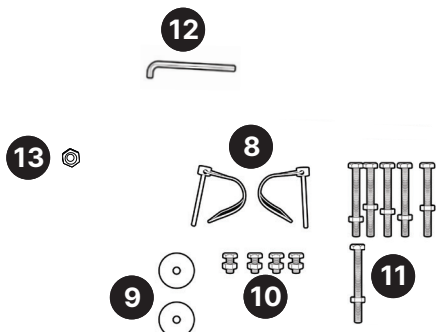

TOOLS REQUIRED

2 x 10MM Wrench
1 x 8MM Wrench


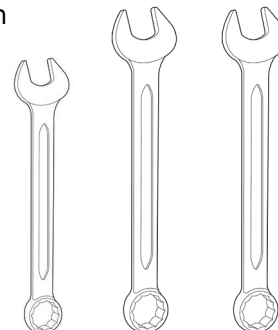


Carefully unbox the spreader and prepare for assembly. The unit arrives partially assembled. Check that all parts are included before assembly. To finish the setup, attach the handle parts, back stand, and wheels to the hopper. The box contains the following parts:



DropZone™ Spreader parts list

- | | |
|---|-------------------------------------|
| 1. Handlebar Complete | 8. Linchpins x 2 |
| 2. Backstand | 9. Washers M6 x 2 |
| 3. Hopper | 10. Bolts + Nuts M6 x 12 x 4 |
| 4. Wheels x 2 | 11. Bolts + Nuts M6 x 55 x 6 |
| 5. Control Rod | 12. Allen Key |
| 6. Gauge Assembly Complete, Bolts + Nuts | 13. M5 Nut |
| 7. Hopper Lifting Handle | 14. Rain Cover |


Assembling your **DropZone™** Spreader

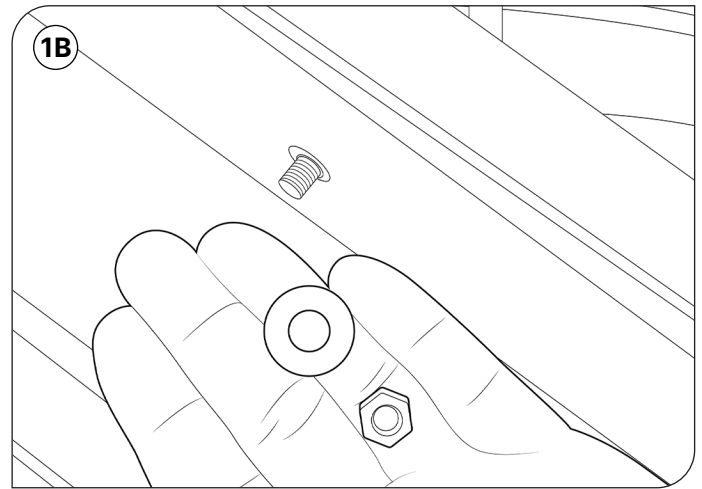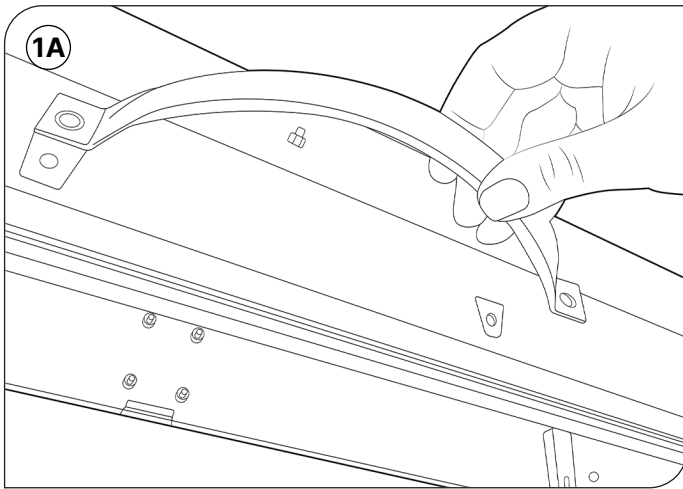


Attach the lifting handle (part 7) to the hopper body as shown. Using 2 - M6x12 mm bolts and lock nuts, (part 10) and 2 - backing washers (part 9), attach the lifting handle via the two holes on the front of the hopper and tighten the lock nuts.

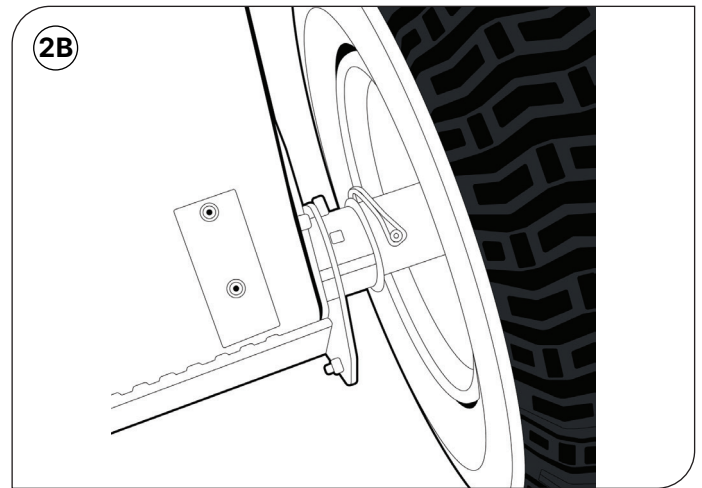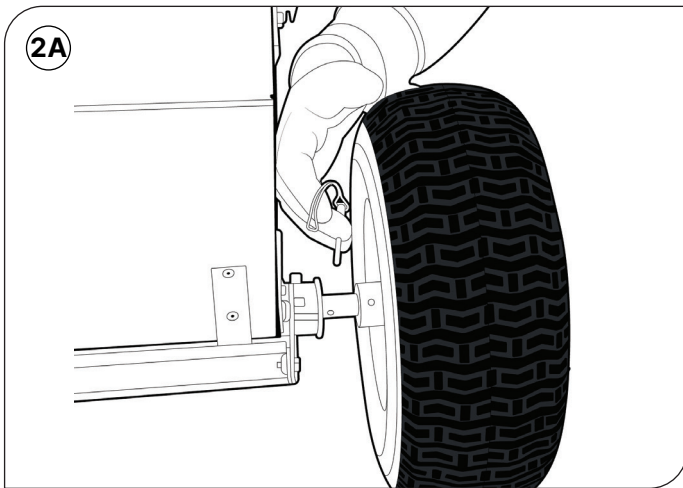

Using the two linchpins (part 8), affix the 2 drive wheels onto the two axles.

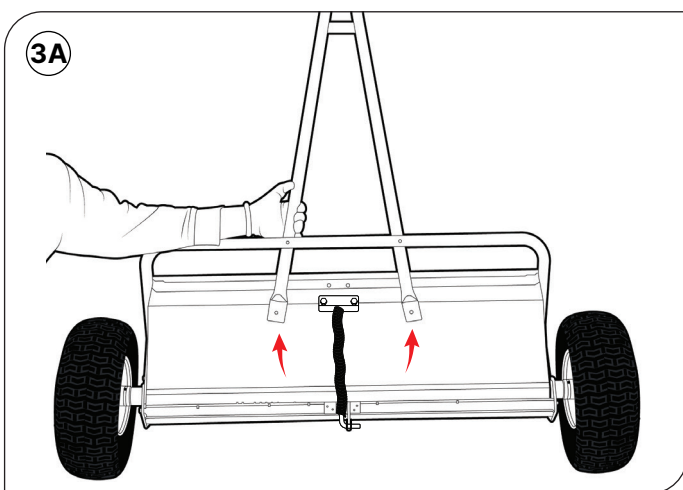


Using 2 - M6x12 bolts & lock nuts (part 10) affix the handlebar (part 1) to the hopper (part 3).

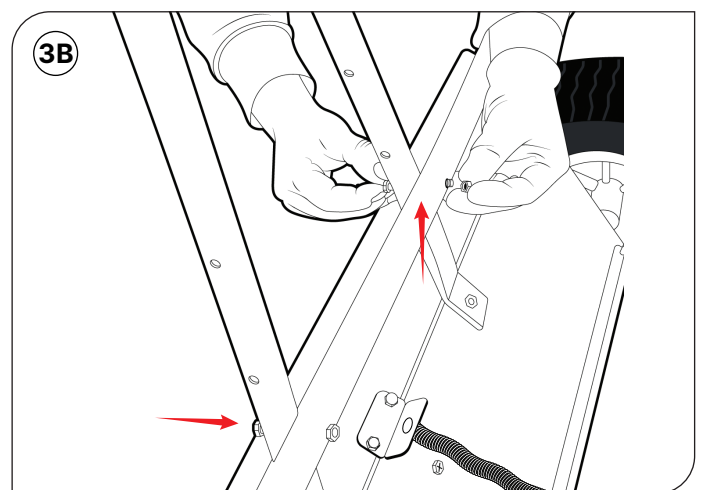


Using 2 - M6x55 bolts and lock nuts (part 11), secure the 2 upper handlebar holes to the hopper frame brace.


Assembling your **DropZone™** Spreader

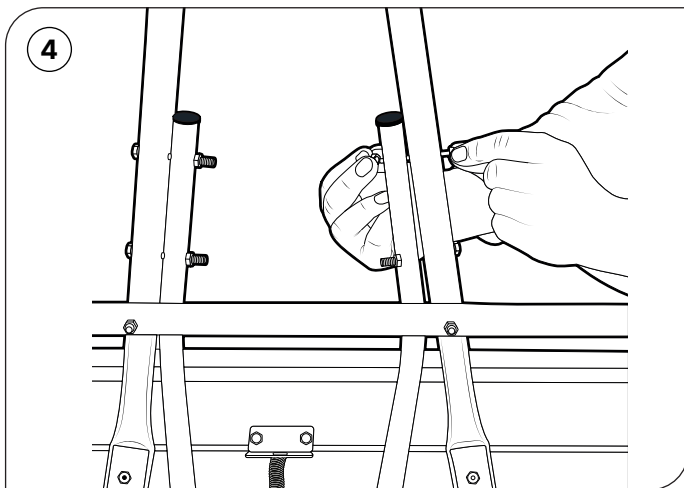


Using 4 - M6x55 bolts and lock nuts (part 11), secure the backstand (part 2) to the handlebar (part 1).

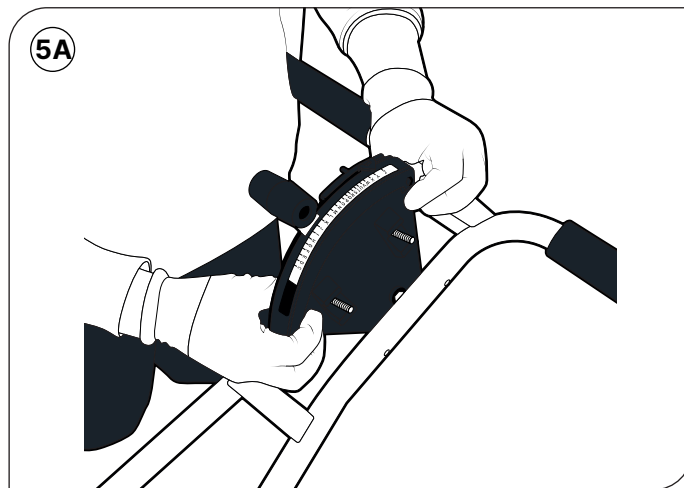


Locate the gauge assembly (part 6) onto the upper section of the handlebar (part 1) using the 2 M6x40 bolts and lock nuts located on the gauge assembly.

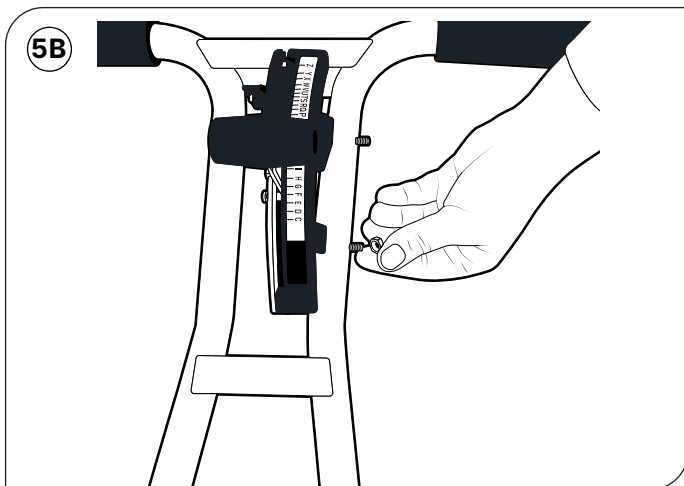


Tighten the two lock nuts as shown.

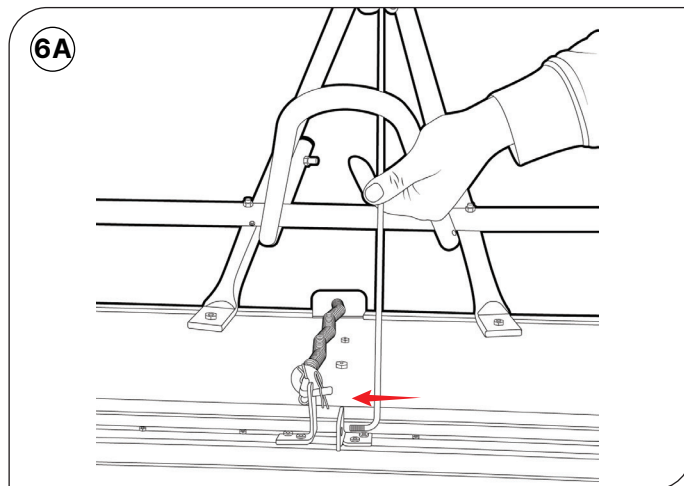

Locate the hook end of the control rod (part 5) into the receiving bracket on the shutter bar on the underside of the hopper (part 3).

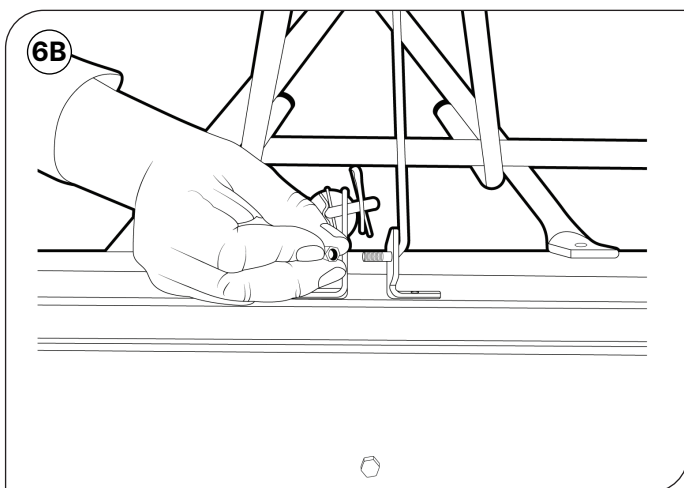

Secure the control rod end in place using the M5 nut (part 13).

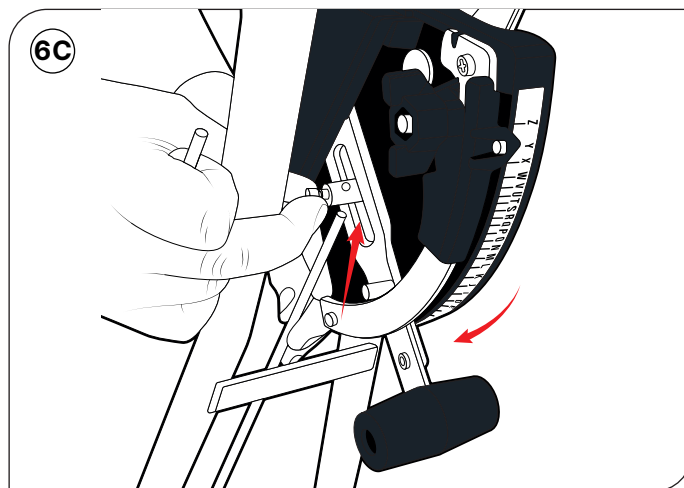

Insert the straight end of the control rod (part 5) through the rod stopper on the control assembly lever. Then push the control lever fully forward as arrowed.


Assembling your **DropZone™** Spreader



With the control lever fully forward, tighten the set screw with the allen key (part 12) as shown.

Check that the holes in the underside of the hopper are fully closed when the gauge lever is in the fully forward closed position and fully open when the gauge lever is in the fully back position.

In the event of the hopper holes not being fully closed at the forward position and or fully open at the fully back position, check that the instructions in **6C** have been followed if required repeat steps **6B**, **6C** and **6D**.

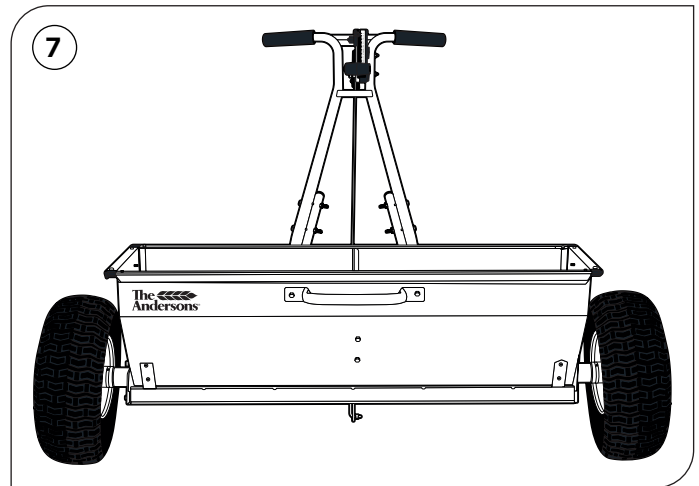

The assembly is complete.

Warranty Information

THE ANDERSONS WARRANTS TO PURCHASER THE FOLLOWING:

1. Product will be free of defects in materials and workmanship for a period of three years from date of purchase.
2. The two grease points on the axles are greased in manufacture. After use check and regrease when necessary.
3. If the spreader is used for commercial rental the Limited Warranty shall be limited to a period of 90 days.
4. All Unit and part replacement will be performed at the reasonable discretion of The Andersons.
5. Labor charges are not covered and the unit need not be returned to the dealer for warranty service.
6. Proof of purchase must be supplied to The Andersons.
7. For warranty questions, contact The Andersons at 800-253-5296.

The Andersons sole obligation under this warranty is limited to repairing or replacing the defective part.

This warranty does not extend to any Product or parts thereof that have been allowed to corrode, subjected to misuse, neglect, accident, or modification by anyone other than The Andersons or that have been affixed to any nonstandard accessory attachment or that have been used, stored, installed, maintained operated in violation of The Andersons instructions or standard industry practice. No agent, employee or representative of The Andersons has any authority to bind The Andersons to any affirmation, representation or warranty concerning the Product and any affirmation, representation or warranty made by any agent, employee or representative shall not be enforceable by Purchaser.

THIS WARRANTY EXTENDS ONLY TO THE ORIGINAL PURCHASER AND IS EXPRESSLY IN LIEU OF ANY OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS OR INTENDED USE FOR A PARTICULAR PURPOSE AND OF ANY OTHER OBLIGATION ON THE PART OF The Andersons. The Andersons SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL LOSS, DAMAGE OR EXPENSE DIRECTLY OR INDIRECTLY ARISING FROM THE USE OF ANY OF THE PRODUCT INCLUDING, BUT NOT LIMITED TO, DAMAGE OR LOSS OF OTHER PROPERTY OR EQUIPMENT, LOSS OF PROFITS OR REVENUE, COST OF CAPITAL, COST OF PURCHASED OR REPLACEMENT GOODS, OR CLAIMS OF CUSTOMERS OF PURCHASER.

It is our first priority to improve our products' quality and performance whenever possible.

Your comments and questions are always welcome. Please call our Helpline: 800-253-5296 (U.S. Only) or visit our website at www.AndersonsPro.com